

User's Manual for Aimpoint Comp and 7000 series

CHAPTER I

1.1 Presentation

Aimpoint's Reflex Sights are rugged precision electronic optical red dot sights developed for civilian, military and law enforcement applications.

Aimpoint sights are designed for the "two eyes open" method of sighting, which greatly enhances situational awareness and target acquisition speed. Thanks to the parallax-free design, the dot follows the movement of the user's eye while remaining fixed on the target, eliminating any need for centering. Further, the sight allows for unlimited eye-relief.

The CompM2 is compatible with 1st, 2nd and 3rd generation night vision devices, while the other sights are optimized for applications, which do not require night vision compatibility.

Aimpoint has now introduced the *CET* technology, a radical advancement in red dot sighting performance with over 30 times longer battery life than the previous XD – sights.

1.2 Specification

1.2.1 All models

Material – housing:	Extruded, high strength aluminum, anodized
Material – lens covers:	Thermoplastic elastomer, black, non-glare
Optical magnification:	1X for all models except for 2X
Eye relief:	Unlimited, no centering required
Optical coating:	Anti Reflex coating, all surfaces Multi-layer coating for reflection Band Pass coating for NVD compatibility (CompM2)
Dot size:	4 MOA, 2 MOA for 2X, 7 MOA in CompC SM only
Battery:	One 3 Volt Lithium battery type 2L76 or DL1/3N
Battery life* (hours):	1000 – 10.000 h (typically 10 years at CompM2 NVD position), 100 – 1000 h for CompC SM (XD Diode)

Adjustment: Range ± 2 m at 100 meters, in windage and elevation
1 click = 10 mm at 80 meters = 13 mm at 100 meters =
= $\frac{1}{2}$ " at 100 yards.

*) Average values, depending on brightness setting

MOA: Minute Of Angle 1MOA = 30 mm at 100 meters = 1" at 100 yards
NVD: Night Vision Device

1.2.2 Model 7000SC, 7000L, 7000SC-2X and 7000L-2X

Length:	7000SC: 160 mm (6.3")	7000SC-2X: 195 mm (7.7")
	7000L: 200 mm (7.9")	7000L-2X: 235 mm (9.3")
Width / height	7000SC/L: 55 mm (2.2")	7000SC/L-2X: 60 mm (2.4")
Weight:	7000SC: 200 gram (7.0 oz)	7000SC-2X: 290 gram (10.2 oz)
	7000L: 225 gram (7.9 oz)	7000L-2X: 315 gram (11.1 oz)
Surface finish:	Carbon Black or Silver Metallic/SM (only 7000SC), semi-matte	
Mounting:	2 rings, 30 mm diameter	
Distance between rings:	7000SC: min 50 mm (2.0"), max 115 mm (4.5")	
	7000L: min 60 mm (2.4"), max 155 mm (6.1")	
Switch, dot brightness:	10 pos.: 1 Off, 9 daylight of which 1 Extra Bright	
Max temperature range:	-30°C to +60°C (-20°F to +140°F)	
Water resistance:	Waterproof to 2 m (7 ft) water depth	

1.2.3 Model CompC and CompC-2X

Length:	CompC: 120 mm (4.7")	CompC-2X: 155 mm (6.1")
Width / height:	CompC: 55 mm (2.2")	CompC-2X: 60 mm (2.4")
Weight:	CompC: 185 gram (6.5 oz)	CompC-2X: 275 gram (9.7 oz)
Surface finish:	Carbon Black or Silver Metallic/SM (only CompC), semi-matte	
Mounting:	One wide ring, 30 mm diameter	
Switch, dot brightness:	10 pos.: 1 Off, 9 daylight of which 1 Extra Bright	
Max temperature range:	-30°C to +60°C (-20°F to +140°F)	
Water resistance:	Waterproof to 2 m (7 ft) water depth	

1.2.4 Model CompM2, CompML2, CompM2-2X and CompML2-2X

Length (incl. lens covers):	CompM2 / ML2: 130 mm (5.1")
	CompM2-2X / ML2-2X: 165 mm (6.5")
Width / height:	CompM2 / ML2: 55 mm (2.2")
	CompM2-2X / ML2-2X: 60 mm (2.4")
Weight (incl. lens covers):	CompM2 / ML2: 200 gram (7.1 oz)
	CompM2-2X / ML2-2X: 290 gram (10.2 oz)

Surface finish:	Hard Anodized, Graphite Grey, matte
Mounting:	One wide ring, 30 mm diam, or Aimpoint QR Ring
Switch, dot brightness:	CompM2 / M2-2X: 10 positions: 4 NVD, 6 daylight of which 1 Extra Bright CompML2 / ML2-2X: 10 positions: 1 Off, 9 daylight of which 1 Extra Bright
Max temperature range:	-45°C to +70°C (-50°F to +160°F)
Water resistance:	Submersible to 25 m (80 ft) water depth*

*) Tests performed have shown that sights will stand over 100 meters (330 ft) of water depth.

1.3 Location and description of major components and functions

See fig. 1 and 2

- | | |
|--|-----------------------------|
| 1. Battery Lid | 7. Rubber Strap |
| 2. Battery
(DL1/3N or similar) | (for CompM2 and ML2 models) |
| 3. Cover for adjustment screw | 8. Eye Protection |
| 4. Adjustment Screw
(windage/elevation) | 9. Lens Cover, rear |
| 5. Rotary Switch | (for CompM2 and ML2 models) |
| 6. Rubber Strap
(for 7000 models and CompC) | 10. Lens Cover, front |
| | (for CompM2 and ML2 models) |
| | 11. Lens Cover for 2X |
| | (for CompM2 and ML2 models) |

CHAPTER II

OPERATION UNDER NORMAL CONDITIONS

2.1. Assembly and preparation for use

WARNING: Insure the weapon is unloaded and the safety selector is in the "safe" position before attempting to install, remove or perform maintenance on the sight.

2.1.1. Installing Battery

- Remove battery cap by turning it counterclockwise.
- Insert battery with positive (+) end toward cap.

Caution while replacing battery (not necessary when the sight is unused)

Before installing battery cap, inspect that the O-ring is present and not damaged. Failure to do so could result in water leakage into the battery compartment.

- c) Install battery cap by turning clockwise until snug. Hand tighten only. Using tools could damage equipment.
- d) Verify that red dot is present by turning the rotary switch clockwise.

2.1.2. Installing Ring and Sight on the weapon

Aimpoint's sights are designed for installation on most types of weapons. For mounting, certain models come with one or two rings, for other models use standard rings available on the market. If your weapon does not have or support an appropriate base(s), please consult your dealer, gunsmith or other qualified source.

- a) When using two separate bases on the weapon, ensure that the bases are parallel and aligned.
- b) Assemble the ring(s) on the appropriate weapon base (a Weaver or Picatinny base). When using 2 rings, make sure that the distance between the rings is appropriate to the sight.

Note: make sure that you have space between the bottom front part of the sight and the top of the base/weapon.

- c') For Comp models: Assemble the sight to the weapon by using Aimpoint's wide 30 mm ring or QR-mount. If other standard 30 mm rings are used, make sure that the ring(s) covers a length of minimum 25 mm or 1" (two standard rings could possibly be used).
- c") For 7000 models: Assemble the sight to the weapon with any standard 30 mm rings.
- d) Ensure that the sight is correctly positioned for right or left hand shooting, see fig 3 and 4.
- e) When using lens covers, ensure that they are correctly positioned and can be opened.
- f) Finally, make sure that all screws are firmly tightened around the sight.
- g) Complete the zeroing (2.2.1).

2.2. OPERATING PROCEDURES

2.2.1. Zeroing

Aimpoint's sights are delivered in a centered position. Normally this means that only small adjustments are necessary, providing that the base(s) are properly aligned.

CAUTION: Do not continue to adjust windage and elevation mechanisms if you encounter resistance.

The elevation adjustment screw is located on top of the sight, while the windage screw is located on the right or left side, depending on how the sight has been mounted on the weapon. (Aimpoint sights can be installed to support either right hand (fig 3) or left hand (fig 4) shooters.)

- a) Open front and rear lens covers.
- b) Turn the rotary switch clockwise until the red dot has a sufficient intensity to contrast against the target.
- c) Remove the windage and elevation adjustment caps.

NOTE: Each click of the adjustment screw corresponds to a 10 mm movement of the point of impact at 80 meters, (3 mm at 25 meters, 13 mm at 100 meters and 25 mm at 200 meters or $\frac{1}{4}$ " at 50 yds, $\frac{1}{2}$ " at 100 yds and 1" at 200 yds).

- d) Insert adjustment tool (coin, screwdriver, knife) or cartridge casing in adjustment screw slot and turn as follows:
 - To move the point of impact to the right, turn windage adjustment screw counterclockwise (clockwise if screw located on left side).
 - To move the point of impact to the left, turn windage adjustment screw clockwise (counterclockwise if screw located on left side).
 - To move the point of impact up, turn elevation adjustment screw counterclockwise.
 - To move the point of impact down, turn elevation adjustment screw clockwise.
- e) Confirm zeroing by firing at least three shots at a zeroing target. Check impact points on zeroing target to confirm accuracy and repeat above procedure if required.
- f) After initial firing, ensure that the mount and sight are secure.
- g) Turn rotary switch to OFF position (counterclockwise).
- h) Close front and rear lens covers.

CHAPTER III

Operation under extreme conditions

- a) **Extreme heat** (moist or dry). No special procedures required.
- b) **Extreme cold**. Extreme cold might shorten battery life. Keep spare batteries in your inner pockets to keep them warm.
- c) **Salt air**. No special procedures required.
- d) **Sea spray, water, mud and snow**. Ensure that battery cap and two adjustment screw caps are tight before exposing the sight to sea spray, mud, snow or before immersing the sight in water. Hand tighten only.
Keep lens covers closed when sight is not being used. Clean lenses with lens paper/cloth and wipe the sight dry as soon as possible after exposure to water, sea spray, mud or snow.
- e) **Dust storms and sand storms**. Keep lens caps closed when sight is not being used.
- f) **High altitudes**. No special procedures required.

CAUTION: The lenses shall never be cleaned with fingers but with lens paper/cloth.

If no lens paper/cloth available :

- To clear away debris (sand, grass etc): blow away the dirt.
- To clean lenses: mist up the lenses and dry them with a clean and soft piece of cloth.

CHAPTER IV

Trouble shooting procedures

4.1 Red dot does not appear

Discharged battery:	Replace battery
Battery installed incorrectly:	Remove and reinstall battery with (+) toward cap
Battery is not making good contact:	Clean contact surfaces and reinstall battery.
Defective rotary switch:	Notify dealer/armourer

4.2 Impossible to zero

Adjustment screw is at its limit:

Check alignment of mount to barrel


Impact point is moving:

Check mount stability

CHAPTER V

MAINTENANCE

- a) This reflex sight does not require any particular maintenance while used under normal conditions.
- b) Under severe weather conditions please refer to chapter III.
- c) Keep lens covers closed whenever the sight is not in use.
- d) Warehouse storage: Remove battery and allow lens surfaces to dry completely (if wet) before closing the lens covers.
- e) To clean lenses refer to CAUTION in chapter III.

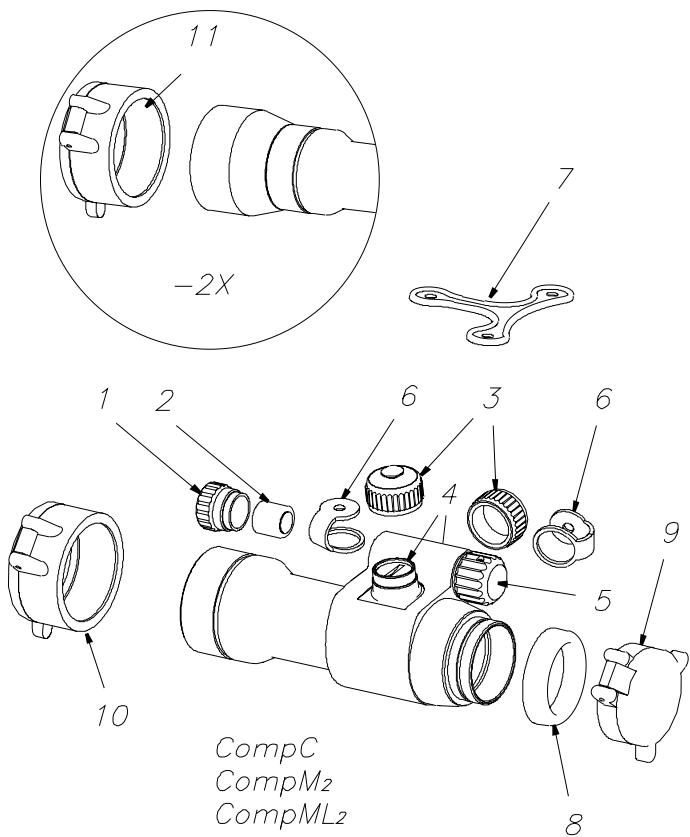

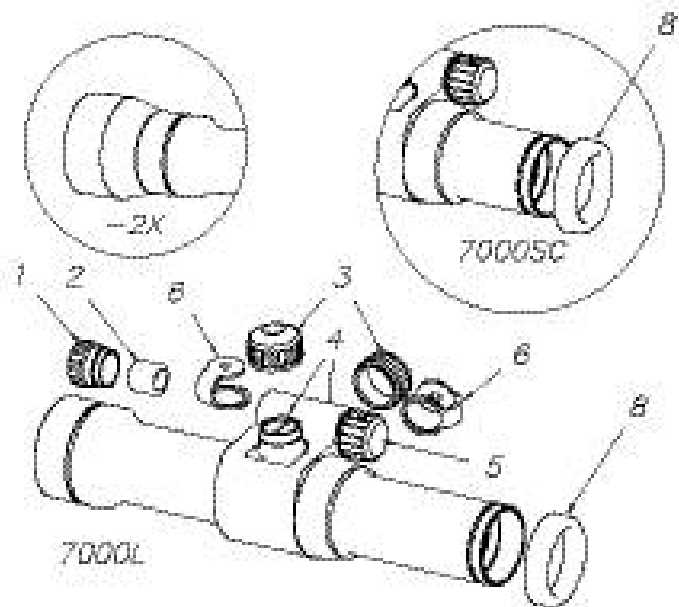


Fig 2

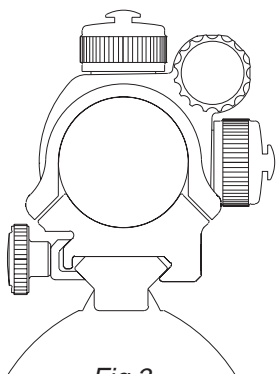


Fig 3

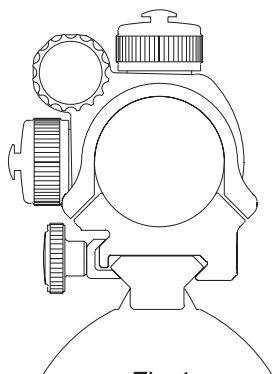


Fig 4